 


Using the PW-TC900 for the first time

Before using the PW-TC900 for the first time, charge the battery by following the procedure below.

 
 
 
 
To charge the battery

- 1 If the power of the unit is turned on, (or something is displayed on the screen) press **入/切** to turn the power off.
- 2 Connect the AC adaptor EA-80A to the unit by following procedure ①-②. (AC 100-240V)
- 3 When the battery is fully charged, charging stops and the charging lamp turns off.
The battery normally takes about five hours to fully charge.
(Charging time will vary depending on operating conditions and the temperature.)
- 4 Disconnect the AC adaptor from the socket on the unit and the power socket.

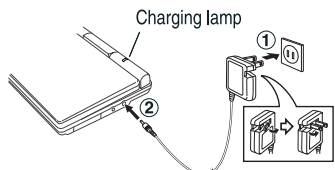

To turn the unit on


- 1 Press **入/切** to turn the power on.
The key sound (beep) on/off screen appears.
Select **Y** or **N** to turn the key sound on/off.
- 2 The input setting screen appears.
Press **Y** to select alphabet character input or press **N** to select Japanese input.
- 3 The 1Seg TV tuning screen appears.
Find the antenna on the side of the body, extend it vertically, then press **Y**. The unit automatically detects all the available channels for the current area for faster switching.
- 4 The initial setting is finished.
You can now use the unit.

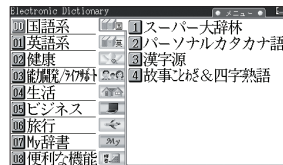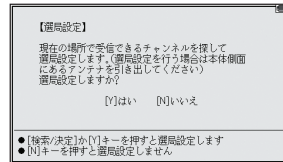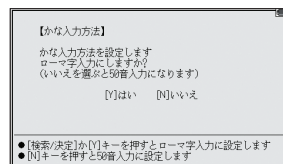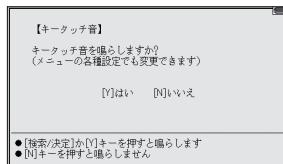

Viewing 1Seg TV contents



Using 1Seg TV

 - 1 Set the viewing style.

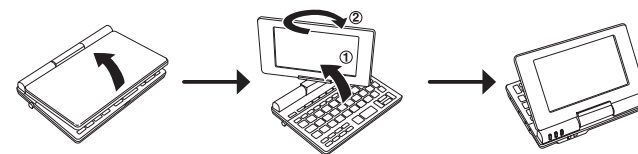

- Do not apply excessive force. Forcing the display to turn in the wrong direction may damage the unit.

 
 
- 2 Extend the antenna.

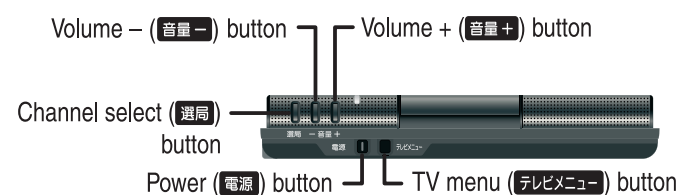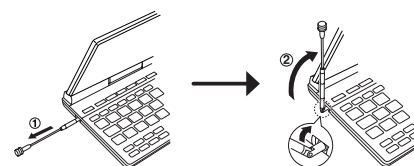

- 3 Press the Power button (電源) to turn the power on.
The TV content is displayed.
• To switch channels, press **選局**.
• To adjust the volume, use **音量+** and/or **音量-**.


Adjusting the viewing size

  - 1 While in the TV viewing mode, press **テレビメニュー**.
The window configuration screen appears.
- 2 Press the Channel select button (選局), followed by the Volume + button (音量+).
The window configuration screen appears.
- 3 Press the Channel select button (選局) to move the "✓" mark to select the viewing size (the default is "標準") and then press the Volume + button (音量+).
Viewing size can also be switched by pressing **切替** while watching the TV.

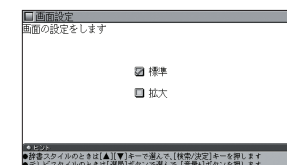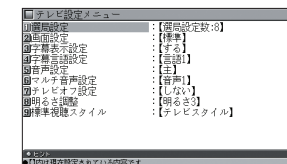


Layout

 Front

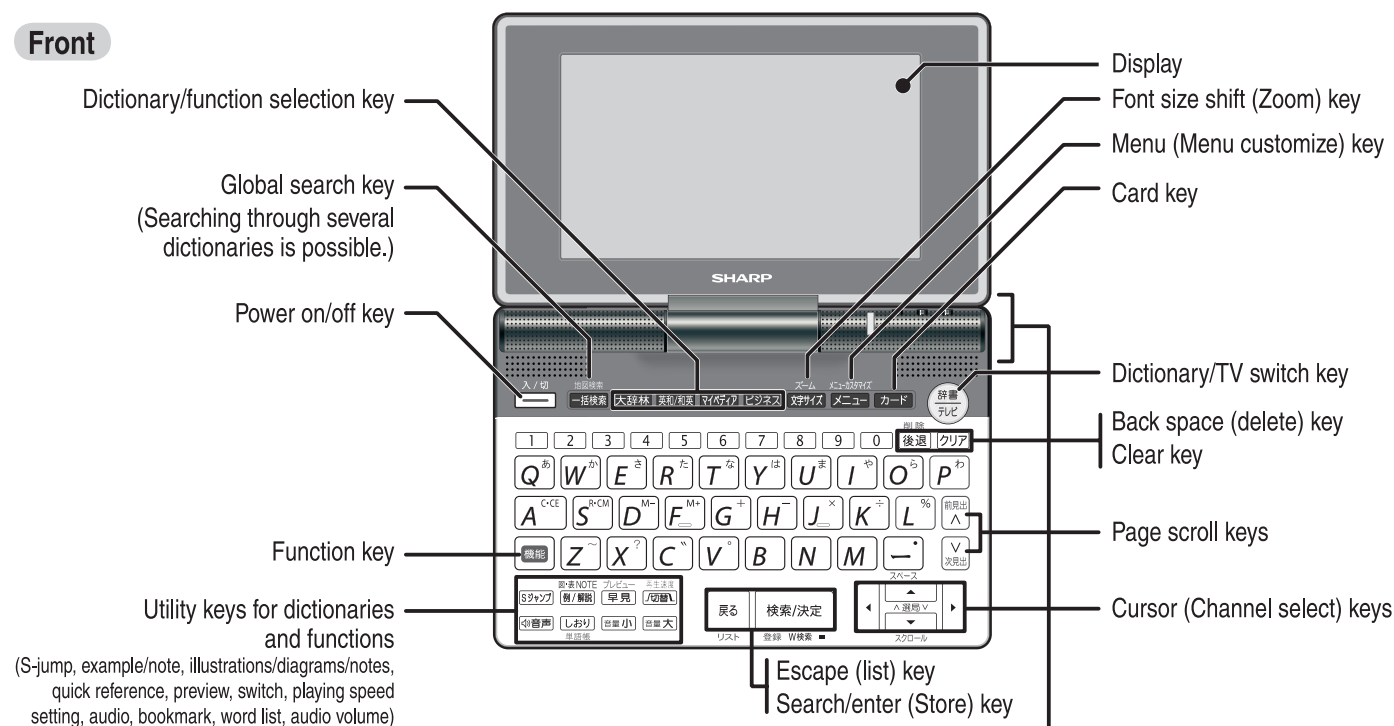

Back edge

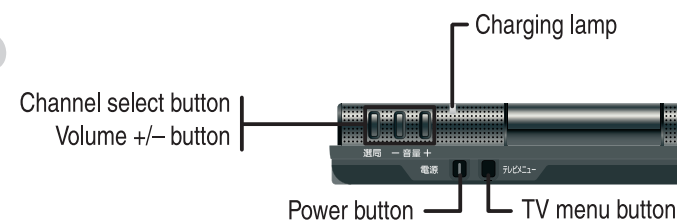 


Using the Dictionaries: Selecting a dictionary/function in the menu display

If the display is set for TV viewing, press **電源** to switch to the Dictionary display.

Press **メニュー**.

The menu display (dictionaries/functions selection display) appears.

 The menu display (dictionaries/functions selection display)

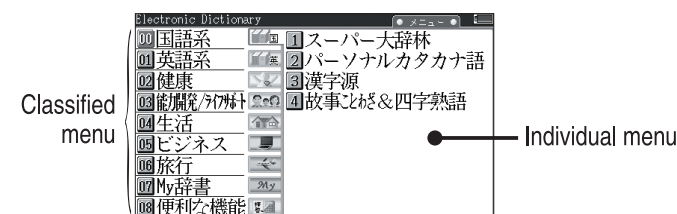

Menu operation

The menu display consists of a list of classified menu items each with a two digit number (00 - 08) to the left.

When you press **メニュー** to open the menu display, "国語系 (Japanese dictionaries)" is selected and the number is outlined in red.

Press **上** or **下** to move the cursor (indicated by the red outline around the number) and choose a different dictionary/function.

Individual menu items of each classified menu are displayed on the right.

Selecting a menu item

Select using the cursor keys and **検索/決定**

- 1 Move the cursor (red outline around number) using **上** or **下** to the classified menu you wish to choose and press **検索/決定** or **右**.
• To return the cursor to the classified menu, press **左**.
- 2 Move the cursor using **上** or **下** to the dictionary/function you wish to use and press **検索/決定**.
The display of the dictionary/function you chose appears.

Select using number keys

- 1 Press the keys (00, 01, 02 to 08) that correspond to the number shown to the left of the classified menu (00, 01, 02 to 08) you wish to choose.
The cursor will be displayed on the individual menu of the classified menu you chose.
- 2 Press the number key that corresponds to the characters shown to the left of the dictionary/function you wish to use.
The display of the dictionary/function you chose appears.
• When the cursor is on an individual menu, return the cursor to the classified menu by pressing **戻る** or **左**.


Global search function

You can search for a word in several target dictionaries.

 
Input the Japanese or English spelling and find a definition from the target dictionaries.

As you type, candidates for matching narrow (filter search). If there are still many candidates after inputting the whole word, you can switch to exact search to browse only the exact word you wish to have defined.

Example: Global search for the word “advantage.”

If the display is set for TV viewing, press  to switch to the Dictionary display.

- 1 Press .
The global search input display appears.

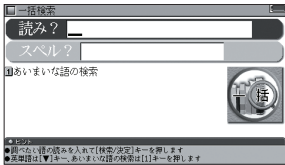


- 2 Press .


Input “advantage” in “スペル？”.

As you type, candidates for matching narrow.



- 3 Press  to search by exact search.

 
The list of words corresponding to your input appears.

If you wish to modify the entry, press  to return to the filter search display and input again.

- 4 Select the desired word using the number keys.



The detailed display of the word appears along with its definitions.

- To return to the previous display, press .

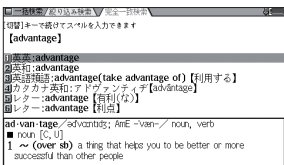

Preview display function

 
If many candidates are listed for a word and it is difficult to decide which word is the correct one, the preview display will help you by providing a brief note about each word.


Each time you press   () , the preview display is turned on or off.

(The preview display is turned off in this display example.)




 





Using (tabs) at the top of the display

 
When you use スーパー大辞林 or other dictionaries, the  mark is displayed at the top of the detailed display.

The tab indicates what information, such as a definition, is displayed at that time. Display of several tabs indicates more information is available related to your search. If several tabs are displayed, press  to switch the display and view the contents.



Example: Switch tabs on the detailed display of the dictionary ジーニアス英和辞典.


If the display is set for TV viewing, press  to switch to the Dictionary display.

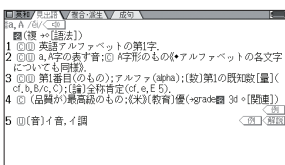- 1 Press      .
The detailed display of “a, A” appears and three tabs are displayed at the top of the display.





 
- 2 Press .

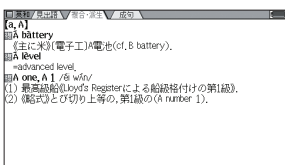
The “ 複合・派生  (compound/derivative)” tab is selected and the compounds/derivatives of the entry are displayed.



- 3 Press  again.


The “ 成句  (idiom)” tab is selected and the related idioms of the entry are displayed.

 - Choose the desired idiom by pressing the number keys and the translation of the idiom is displayed.
- ◆ Press  one more time to return to the detailed display of the entry.

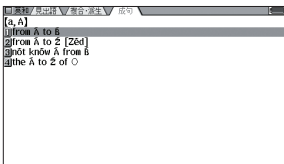

Using the mark on the display



Appearance of the marks , , ,  or similar on the detailed display indicates more information related to the entry is available, such as example sentences, explanations, notes, illustrations or diagrams.

Press  to select the first mark and the color of the mark is inverted.


Press , , ,  to move the highlight to the desired mark and press  to display the contents.



 
 
To exit, press  twice.


Using the mark (Playing audio)


Dictionaries/functions in the menu display (individual menu) indicated with the  mark include items with audio data in MP3 format. The  mark appears next to an item that has audio data.

Example: Play back the audio using “ ジーニアス英和辞典.”

If the display is set for TV viewing, press  to switch to the Dictionary display.

- 1 Press    .

 
Input “advantage” in “スペル？” and then press .

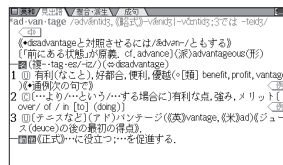







S-jump function

You can search through the contents for the definition or meaning of a word on the detailed display.

 Example: Use S-jump from the dictionary ジーニアス和英辞典 display.

If the display is set for TV viewing, press  to switch to the Dictionary display.

- 1 Press      and input “あいさつ /aisatsu” and then press .


 
The display of “あいさつ” in the dictionary ジーニアス和英辞典 appears.

- 2 Press .

 
 
Operation guide message of S-jump function.






- The cursor (color-inverted) appears.

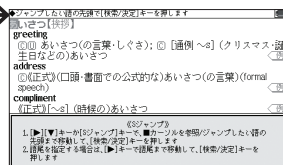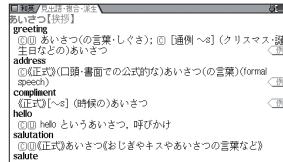

 - 3 Move the cursor (color-inverted) using , , ,  to the desired word.


 

- English words or the word indicated by the jump mark () are selected in whole and their color inverted. You can also select an English word or the word indicated by the jump mark using  and skip the Japanese.

- To select a Japanese word, you must first mark the start and end points.








- Press    and the mark becomes inverted (). Each time you press , the audio plays.

 
If several  marks appear in the display, press the cursor keys to move the cursor to the desired mark and press .



 
- Press  and the color of  reverts to non-inverted.
- ◆ Press  to stop the audio during play.


 
Adjusting the playback speed

- 1 Press     .

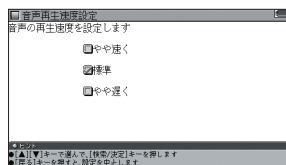
 
The playback speed setting display appears.



- 2 Press ,  to move the “✓” mark to select the playback speed (the default is “標準”) and then press . The playback speed is set and the main menu display appears.


Playback speed can also be adjusted by pressing  () (再生速度) when the audio mark or a word is inverted.


To mark the word “言葉”

Move the cursor “■” to the starting point “言” and press . Then press  to move the cursor “■” to the end point “葉.” (If you wish to mark a one letter word, you do not have to mark the end point.)

- 4 Press .

A list of candidates appears in the jump window.

- If the word is indicated with  or there is only one match, the detailed display appears in the jump window.

- 5 Press the number key that corresponds to the desired word (in this case .

The detailed display appears in the jump window.

- 6 Press  to S-jump the display.

The detailed display of the selected word appears.

- To return to the previous display, press .

